


# How to use the washing machine



①After loading the laundry, close the lid and press the power button in the red frame of the image.

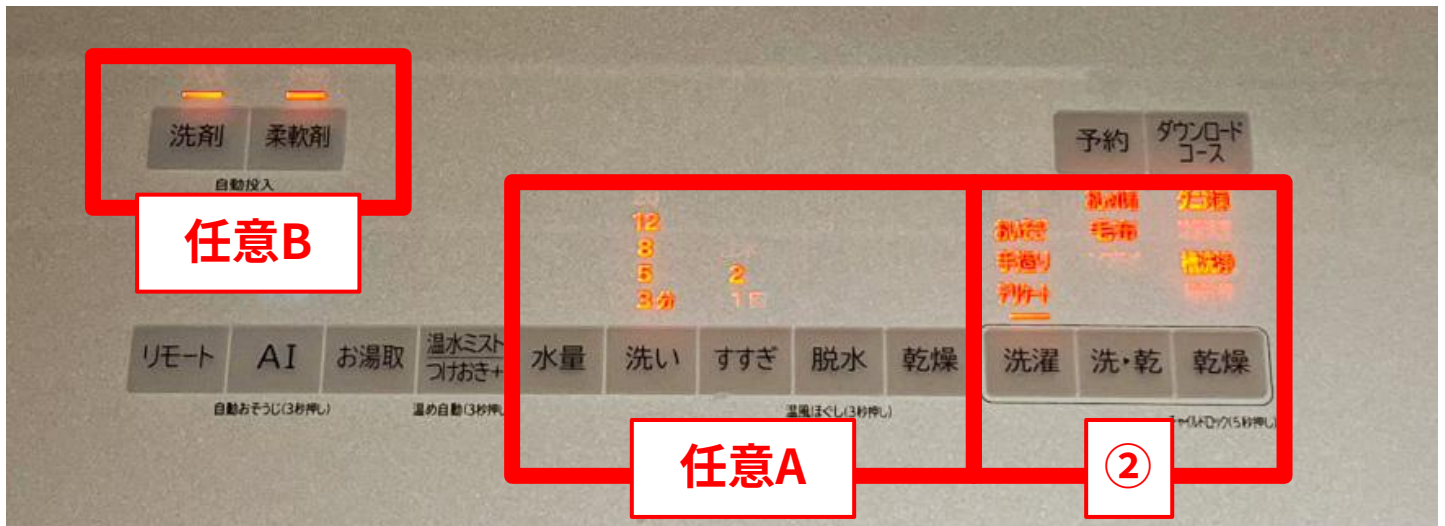

②Selecting a washing course

Washing（洗濯）：Washing→rinsing→dehydrating

Washing and drying（洗・乾）

：Washing→rinsing→dewatering→drying

Drying(乾燥)：Drying only.

(Optional A)（任意A）

You can change the washing and dehydration times and the number of rinses.

(Optional B)（任意B）

No setting is necessary as detergent and fabric softener are automatically added according to the amount of detergent and fabric softener.

③After completing the setup, press the button in the right corner.

If you run out of detergent or fabric softener

Please use the refill located in the door under the washroom.

■ For more detailed information, please visit the manufacturer's website.

[https://kadenfan.hitachi.co.jp/support/wash/manual\\_movie/bw-dx120g/](https://kadenfan.hitachi.co.jp/support/wash/manual_movie/bw-dx120g/)