

How to use the gas stove

Precautions for safe use

- Do not leave the area while using the stove.
- When reaching behind the stove, be careful not to catch fire or burn yourself.
- Do not place combustible materials on or around the stove.
- Do not allow young children to approach or touch it alone.




① Place pots and pans on stove top.

※ Because of the safety device, the stove cannot be ignited when there are no objects on top of it.



② Turn on the stove.
(Lower left side of stove)

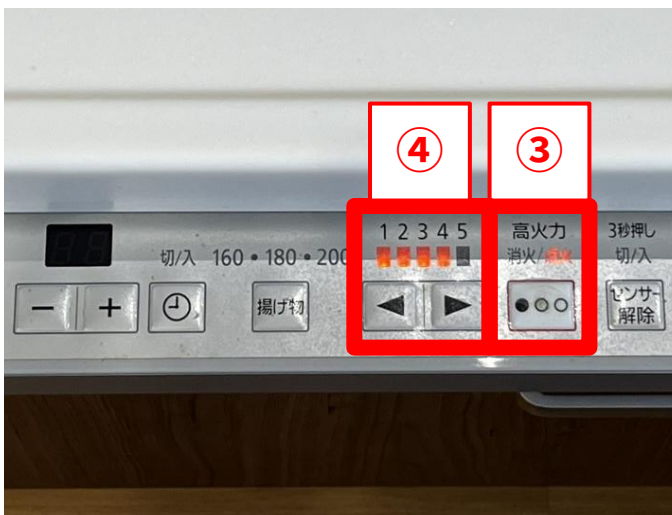

③ Press the button that says High Heat.

④ Use ◀▶ to adjust the heat power.

⑤ Be sure to turn off the power after use. (②電源 切/入)

■ For more detailed information, please visit the manufacturer's website.

<https://www2.panasonic.biz/ideacontout/2012/01/07/2012010700161011.PDF>